

<b>CB-Frequenzliste Kanal 1 - 80</b>				1 – 80 FM 4 Watt			
				1 – 40 AM 1 Watt / SSB 4 Watt			
				5 – 40 EXPORT / AMATEURFUNKGERÄT			
Kanal	Frequenz (MHz)	Kanal	Frequenz (MHz)	Kanal	Frequenz (MHz)	Kanal	Frequenz (MHz)
1	26965	21	27215	41 <b>5</b>	26565	61 <b>21</b>	26765
2	26975	22	27225	42 <b>6</b>	26575	62 <b>22</b>	26775
3	26985	23	27255	43 <b>7</b>	26585	63 <b>24</b>	26785
4	27005	24	27235	44	<b>26595 α</b>	64 <b>25</b>	26795
5	27015	25	27245	45 <b>8</b>	26605	65 <b>23</b>	26805
6	27025	26	27265	46 <b>9</b>	26615	66 <b>26</b>	26815
7	27035	27	27275	47 <b>10</b>	26625	67 <b>27</b>	26825
8	27055	28	27285	48 <b>11</b>	26635	68 <b>28</b>	26835
9	27065	29	27295	49	<b>26645 α</b>	69 <b>29</b>	26845
10	27075	30	27305	50 <b>12</b>	26655	70 <b>30</b>	26855
11	27085	31	27315	51 <b>13</b>	26665	71 <b>31</b>	26865
12	27105	32	27325	52 <b>14</b>	26675	72 <b>32</b>	26875
13	27115	33	27335	53 <b>15</b>	26685	73 <b>33</b>	26885
14	27125	34	27345	54	<b>26695 α</b>	74 <b>34</b>	26895
15	27135	35	27355	55 <b>16</b>	26705	75 <b>35</b>	26905
16	27155	36	27365	56 <b>17</b>	26715	76 <b>36</b>	26915
17	27165	37	27375	57 <b>18</b>	26725	77 <b>37</b>	26925
18	27175	38	27385	58 <b>19</b>	26735	78 <b>38</b>	26935
19	27185	39	27395	59	<b>26745 α</b>	79 <b>39</b>	26945
20	27205	40	27405	60 <b>20</b>	26755	80 <b>40</b>	26955